
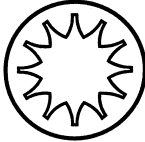


Anziehvorschrift für Zylinderkopf		898.510 passend für / suitable for adaptable à / adaptable a VW	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
<div></div> <div>189.380 M 12x1,75x137</div>			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	30 Nm 50 Nm 90° 90°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø 82 $\frac{1}{4}$ 1,71 mm			
Mot. CFFA, CFFB, CFFD, CFFE, CFGB, CLLA, CFHD, CJCB, CLCA, CFHB, CFHC, CLCB, CLJA, CGLD, CGLC, CMGB, CJCA, CGLA, CGLB, CMGA, CFHF, CFHA, CFJA, CFGB,			
Golf, Jetta, Passat, Tiguan, A1, A3, A4, A6, Q5, TT, Octavia, Superb, Yeti, Alhambra, Altea, Leon			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*898.510*	