
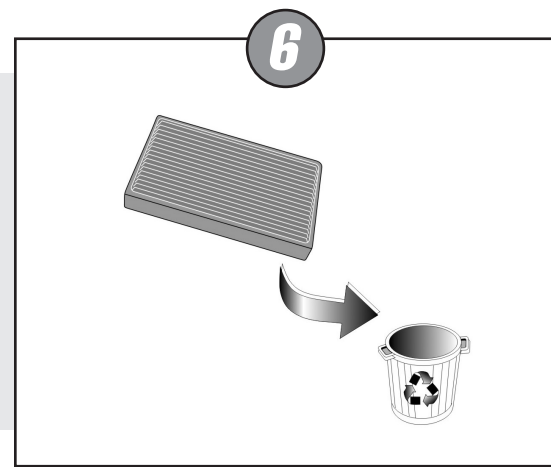
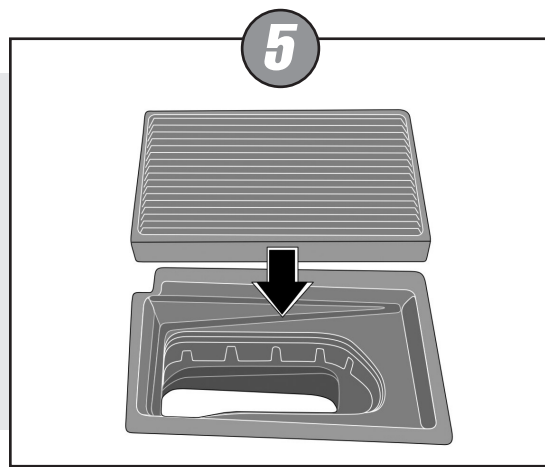


filter NC 2056
Volvo 850 1991->
C70, S70, V70 ->06/00

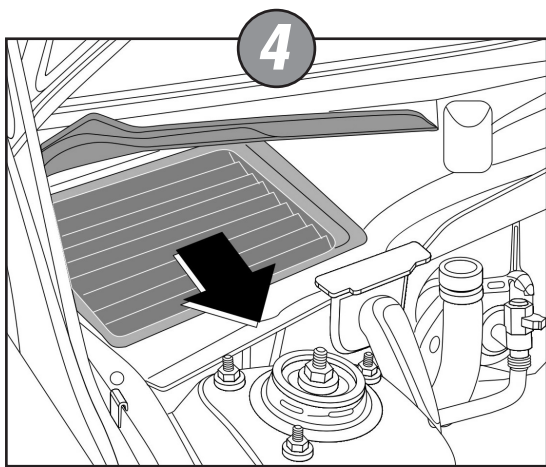

Per il montaggio procedere eseguendo le operazioni in senso inverso.

Continue mounting in reverse order of operations.

Le remontage s'effectue dans l'ordre inverse.

Der weitere Einbau erfolgt in umgekehrter Reihenfolge.

Para concluir la instalaciòn, seguir el orden inverso.

